

Гидравлические детали для экскаваторов KOMATSU

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884


Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: syz@nt-rt.ru || сайт: <https://skshydraulic.nt-rt.ru/>

HPV35/HPV55/HPV90/HPV160/PC50/PC400-7


(KOMATSU)HPV35(PC60)/HPV55(PC120)/HPV90(PC200-3)/HPV90(PC200-5)/HPV160(PC300/400-3/5)/PC50/400-7

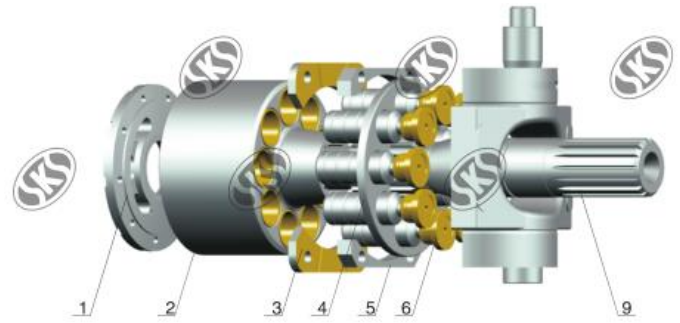

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	RETAINER	2
4	SPACER	2
5	PISTON SHOE	1
6	RETAINER PLATE	9
7	SWASH PLATE	1
8	SUPPORT	1
9	DRIVE SHAFT	1
10	CHARGE PUMP	1
11	VALVE	1
12	SERVO PISTON	1

HPV95/132/PC360-7/PC200-8/240-8/PC1250


(KOMATSU)HPV95/132/PC360-7/PC200-8/240-8/PC1250

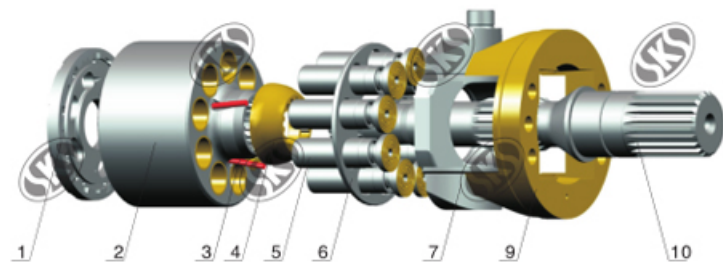

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE LEFT	1
	VALVE PLATE RIGHT	1
2	CYLINDER BLOCK	2
3	PRESS PIN	6
4	BALL GUIDE	2
5	PISTON SHOE	18
6	RETAINER PLATE	2
7	SWASH PLATE(FLAT)	2
8	SWASH PLATE(WITH ARM)	2
9	SUPPORT FRONT	1
	SUPPORT REAR	1
10	DRIVE SHAFT FRONT	1
	DRIVE SHAFT REAR	1
11	CHARGE PUMP	1

PC30UU


(KOMATSU)PC30UU

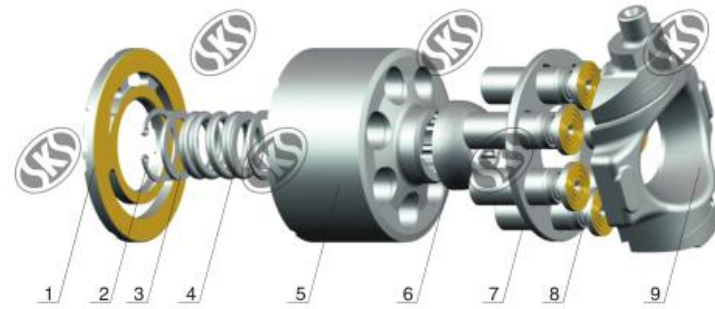

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	SNAP RING	1
3	WASHER	2
4	COIL SPRING	1
5	CYLINDER BLOCK	1
6	BALL GUIDE	1
7	RETAINER PLATE	1
8	PISTON SHOE	7
9	SWASH PLATE	1

PC40-8/PC60-7


(KOMATSU)PC40-8/PC60-7

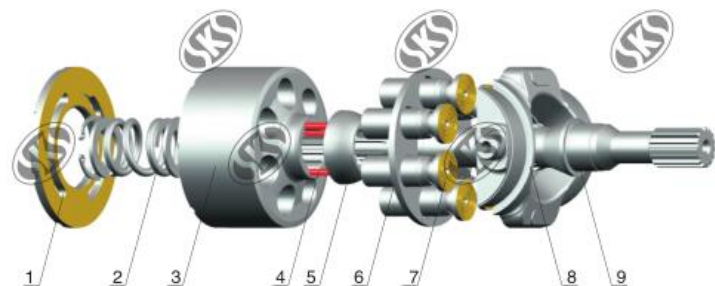

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	SPRING	1
3	CYLINDER BLOCK	1
4	PRESS PIN	3
5	BALL GUIDE	1
6	RETAINER PLATE	1
7	PISTON SHOE	7(9)
8	SWASH PLATE	1
9	DRIVE SHAFT	1

PC160


(KOMATSU)PC160

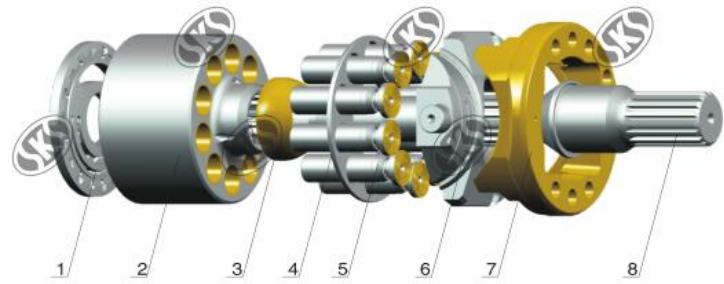

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	RETAINER PLATE	1
5	PISTON SHOE	9
6	SWASH PLATE	1
7	SUPPORT	1
8	DRIVE SHAFT	1

PC200-2/PC60-6


(KOMATSU)PC200-2/PC60-6 SWING MOTOR

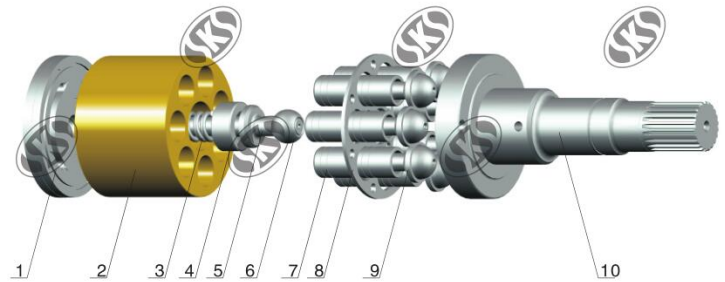

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	SPRING	1
4	WASHER	1
5	CENTER PIN	1
6	CENTER BALL	1
7	PISTON	7
8	RETAINER PLATE	1
9	SPHERICAL WASHER	7
10	DRIVE SHAFT	1

PC320


(KOMATSU)PC320

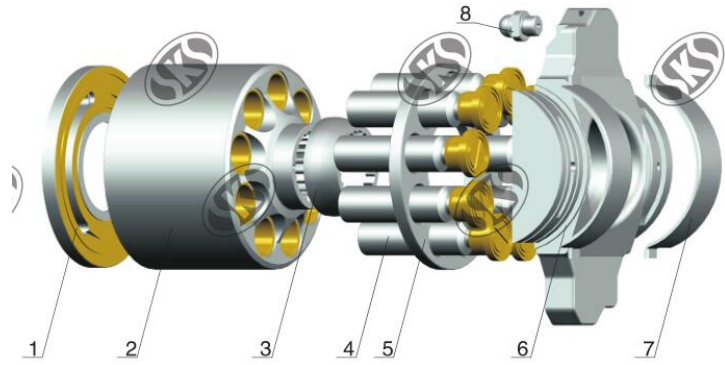

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	PISTON SHOE	9
5	RETAINER PLATE	1
6	SWASH PLATE	1
7	SADDLE BEARING	1
8	YOKE PISTON	1

PC45R-8/60-7 SWING MOTOR


(KOMATSU)PC45R-8/60-7 SWING MOTOR

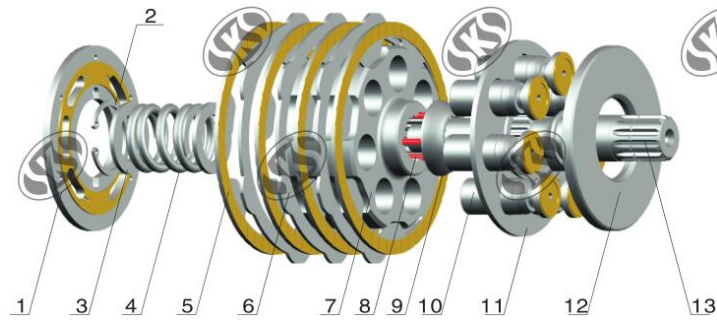

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	SNAP RING	1
3	WASHER	2
4	COIL SPRING	1
5	FRICTION PLATE	2
6	SEPERATION PLATE	3
7	CYLINDER BLOCK	1
8	PRESS PIN	3
9	BALL GUIDE	1
10	PISTON SHOE	7
11	RETAINER PLATE	1
12	THRUST PLATE	1
13	DRIVE SHAFT	1

PC120-6 SWING MOTOR


(KOMATSU)PC120-6 SWING MOTOR

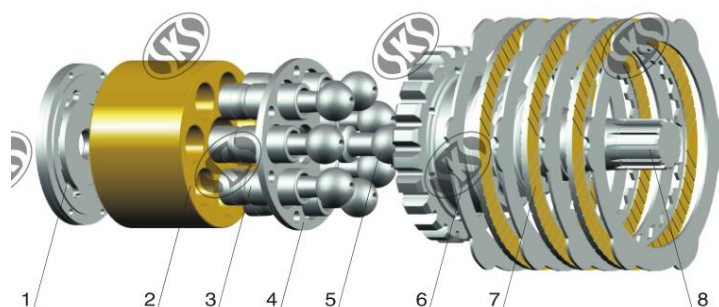

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	PISTON	7
4	RETAINER PLATE	1
5	CENTER PIN	1
6	SEPERATION PLATE	4
7	FRICTION PLATE	3
8	DRIVE SHAFT	1
9	CONTROL VALVE	1

PC200-6/PC450 SWING MOTOR/LMF45/HPV220-8 SWING MOTOR


(KOMATSU)PC200-6/PC450 SWING MOTOR/LMF45/HPV220-8 SWING MOTOR

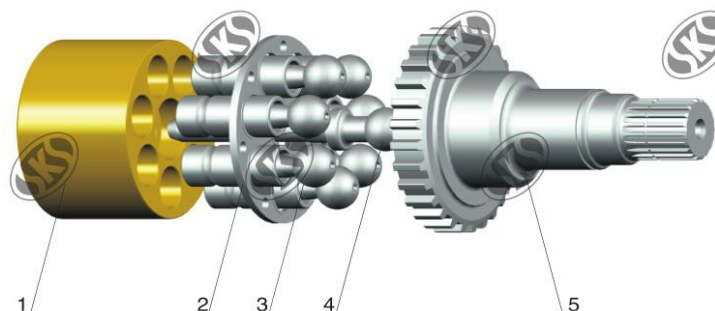

ITEM	DESCRIPTION	QUANTITY
1	CYLINDER BLOCK	1
2	RETAINER PLATE	1
3	PISTON	7
4	CENTER PIN	1
5	DRIVE SHAFT	1
6	FRICTION PLATE	3
7	SEPERATION PLATE	4

PC200-7 TRAVEL MOTOR


(KOMATSU)PC200-7 TRAVEL MOTOR

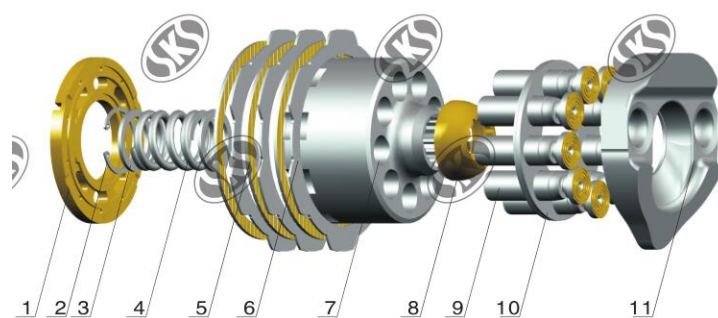

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	SNAP RING	1
3	WASHER	2
4	COIL SPRING	1
5	FRICTION PLATE	3
6	SEPERATION PLATE	4
7	CYLINDER BLOCK	1
8	BALL GUIDE	1
9	PISTON SHOE	9
8	RETAINER PLATE	1
9	SWASH PLATE	1

PC400-7 TRAVEL MOTOR

(KOMATSU)PC400-7 TRAVEL MOTOR

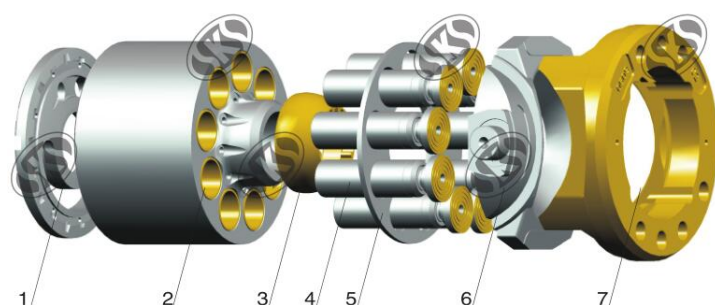

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	PISTON SHOE	7
5	RETAINER PLATE	1
6	SWASH PLATE	1
7	SUPPORT	1

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: syz@nt-rt.ru || сайт: <https://skshydraulic.nt-rt.ru/>