

Гидравлические детали НІТАСНІ

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884


Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: syz@nt-rt.ru || сайт: <https://skshydraulic.nt-rt.ru/>

HPV050/102/118


(EX/ZX)HPV050 /HPV102(EX200-5/6)/HPV118 (ZX200-3、ZX270 MAIN PUMP)

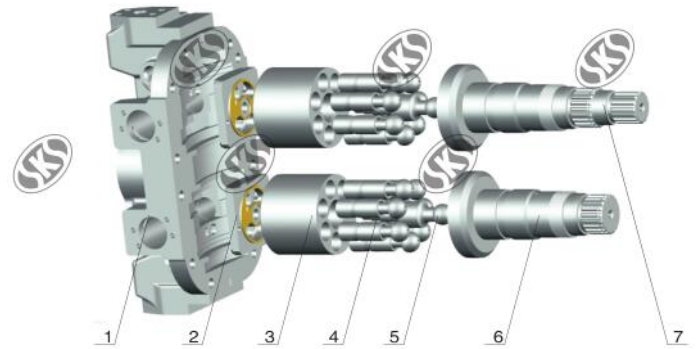

ITEM	DESCRIPTION	QUANTITY
1	REAR COVER	1
2	VALVE PLATE LEFT	1
	VALVE PLATE RIGHT	1
3	CYLINDER BLOCK	2
4	PISTON	14
5	CENTER PIN	2
6	DRIVEN SHAFT	1
7	DRIVE SHAFT	1
8	CHARGE PUMP	1

ZX120-6 MAIN PUMP(HPK055)


(EX/ZX)ZX120-6 MAIN PUMP(HPK055)

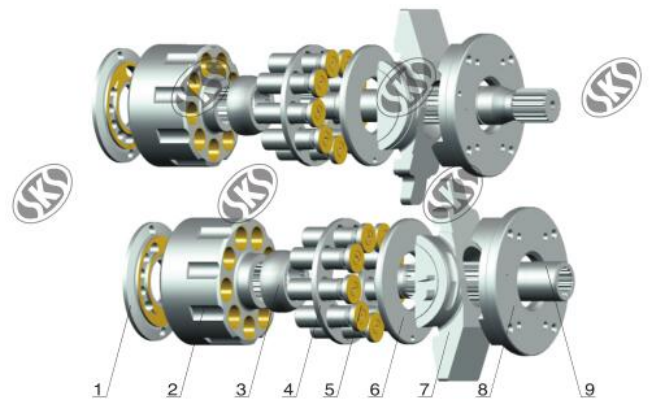

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	RETAINER PLATE	1
5	PISTON SHOE	9
6	THRUST PLATE	1
7	SWASH PLATE	1
8	SUPPORT	1
9	DRIVE SHAFT	1

HPV091(EX200-2/3, EX120-2 PUMP)


(EX/ZX)HPV091(EX200-2/3, EX120-2 PUMP)

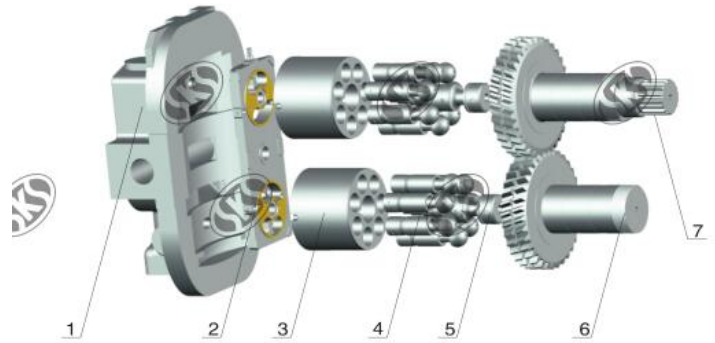

ITEM	DESCRIPTION	QUANTITY
1	REAR COVER	1
2	VALVE PLATE	2
3	CYLINDER BLOCK	2
4	PISTON	14
5	CENTER PIN	2
6	DRIVEN SHAFT	1
7	DRIVE SHAFT	1
8	VALVE PLATE	1
9	CHARGE PUMP	1

HPV116/145/125B


(EX/ZX)HPV116(EX200-1)/HPV145(EX300-1/2/3)/HPV125B(UH07、UH083)

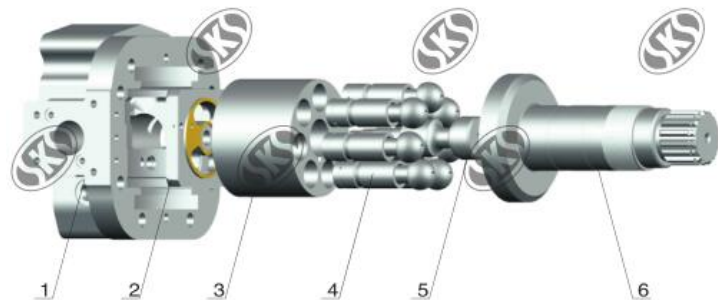

ITEM	DESCRIPTION	QUANTITY
1	REAR COVER	1
2	VALVE PLATE	1
3	CYLINDER BLOCK	1
4	PISTON	7
5	CENTER PIN	1
6	DRIVE SHAFT	1
7	VALVE PLATEBOLT	2
8	CHARGE PUMP	1

HPV125A/B


(EX/ZX)HPV125A/B (UH07-7、UH083)

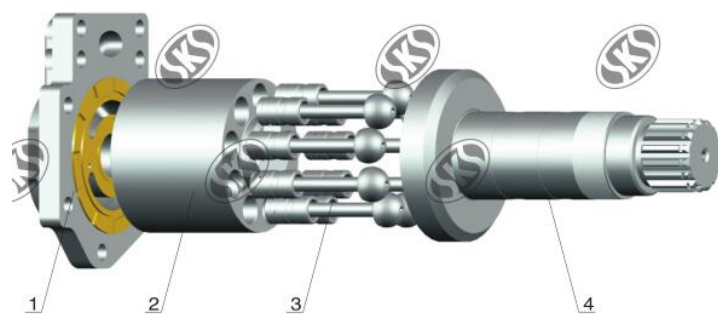

ITEM	DESCRIPTION	
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	PISTON	9
4	DRIVE SHAFT	1
5	CENTER PIN	1

EX60-2/3 SWING MOTOR


(EX/ZX)EX60-2/3 SWING MOTOR

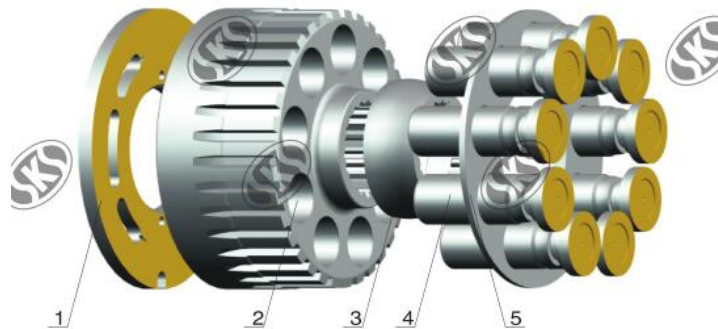

ITEM	DESCRIPTION	
1	VALVE PLATE MOTOR	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	PISTON SHOE	9
5	RETAINER PLATE	1

EX105-2 MOTOR/EX120-2 SWING MOTOR/EX120-5 SWING MOTOR


(EX/ZX)EX105-2 MOTOR/EX120-2 SWING MOTOR/EX120-5 SWING MOTOR(AP5S67)

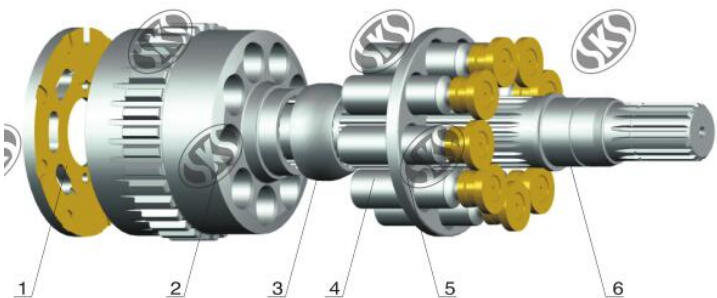

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	PISTON SHOE	9
5	RETAINER PLATE	1
6	DRIVE SHAFT	1

ZAX120 SWING MOTOR


(EX/ZX)EX105-2 MOTOR/EX120-2 SWING MOTOR/EX120-5 SWING MOTOR(AP5S67)

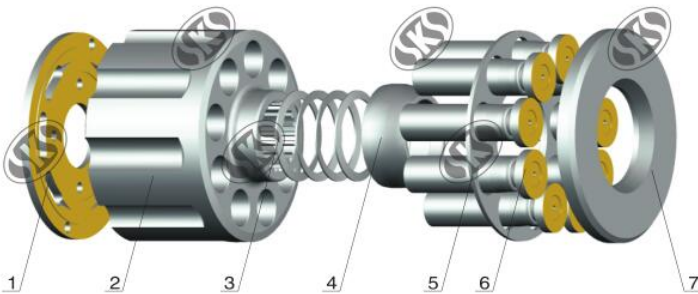

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	CYLINDER BLOCK	1
3	BALL GUIDE WASHER	4
4	BALL GUIDE	1
5	RETAINER PLATE	1
6	PISTON SHOE	9
7	THRUST PLATE	1

EM56 TRAVEL MOTOR


(EX/ZX)EM56 TRAVEL MOTOR

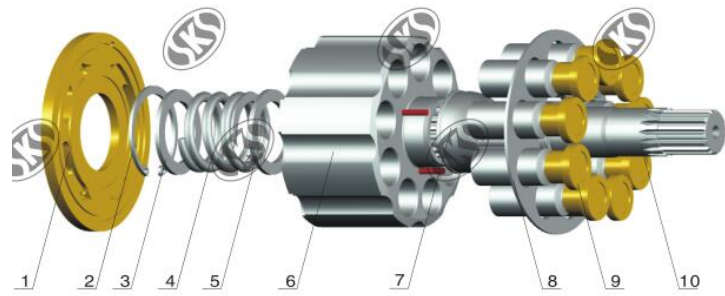

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	SNAP RING	1
3	WASHER NETHER	1
4	COIL SPRING	1
5	WASHER UP	1
6	CYLINDER BLOCK	1
7	BALL GUIDE	1
8	RETAINER PLATE	1
9	PISTON SHOE	9
10	DRIVE SHAFT	1


HMGC16/32/35

(EX/ZX)HMGC16(EX100-1)/HMGC32(EX200-1) /HMGC35(EX200-5)TRAVEL MOTOR

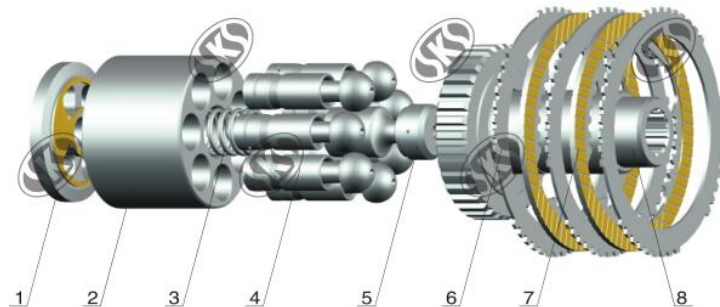


ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	SPRING	1
4	PISTON	7
5	CENTER PIN	1
6	FRICTION PLATE	3
7	SEPERATION PLATE	2
8	DRIVE SHAFT	1

EX550-3 TRAVEL MOTOR
(EX/ZX)EX550-3 TRAVEL MOTOR

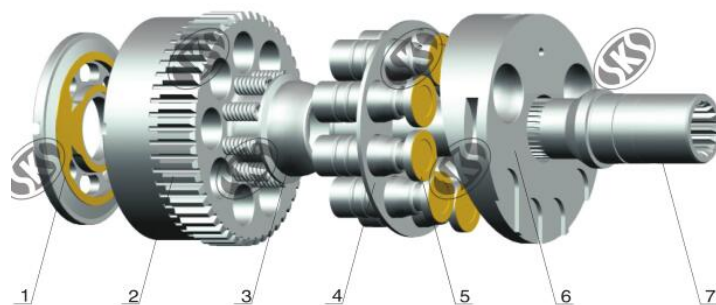

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	CYLINDER BLOCK	1
3	BALL GUIDE	1
4	RETAINER PLATE	1
5	PISTON SHOE	9
6	SWASH PLATE	1
7	DRIVE SHAFT	1


HMGE36EA(ZX200 TRAVEL MOTOR)
(EX/ZX)HMGE36EA(ZX200 TRAVEL MOTOR)

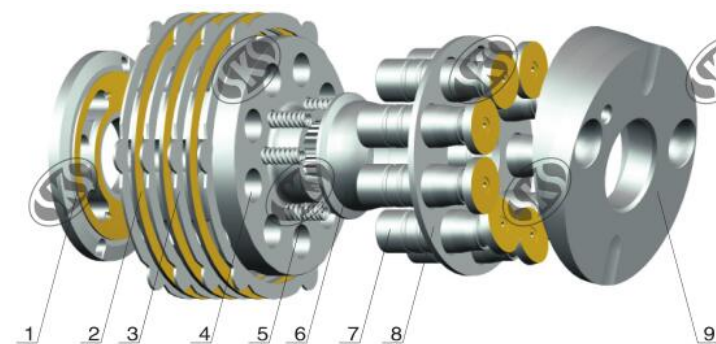

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	FRICTION PLATE	3
3	SEPERATION PLATE	4
4	CYLINDER BLOCK	1
5	SPRING	6
6	BALL GUIDE	1
7	PISTON SHOE	9
8	RETAINER PLATE	1
9	SWASH PLATE	1

HMF160/200


(EX/ZX)HMF160/200

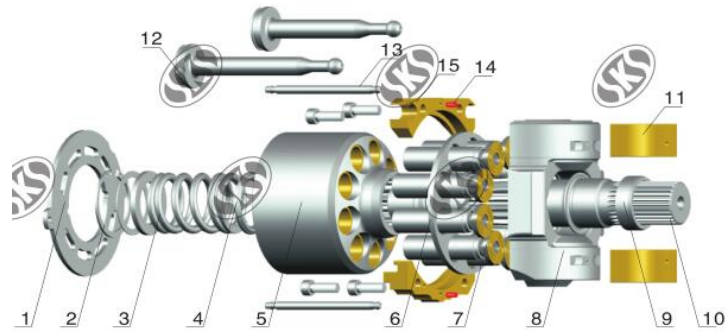

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE MOTOR	1
2	SNAP RING	1
3	COIL SPRING	1
4	WASHER	2
5	CYLINDER BLOCK	1
6	RETAINER PLATE	1
7	PISTON SHOE	9
8	SWASH PLATE	1
9	DRIVE SHAFT SLEEVE	1
10	DRIVE SHAFT	1
11	SADDLE BEARING	1
12	SERVO PISTON	1
13	PRESS PIN	2
14	RETAINER BOLT	4
15	RETAINER	2

ZX330-2 TRAVEL MOTOR

(EX/ZX)ZX330-2 TRAVEL MOTOR

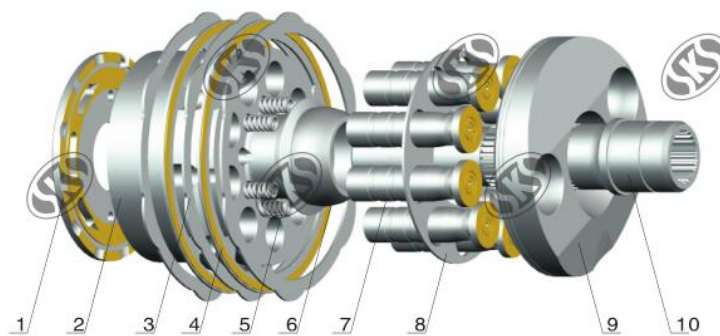

ITEM	DESCRIPTION	QUANTITY
1	VALVE PLATE	1
2	CYLINDER BLOCK	1
3	SEPERATION PLATE	3
4	FRICTION PLATE	4
5	SPRING	6
6	BALL GUIDE	1
7	PISTON SHOE	9
8	RETAINER PLATE	1
9	SWASH PLATE	1
10	DRIVE SHAFT	1

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: syz@nt-rt.ru || сайт: <https://skshydraulic.nt-rt.ru/>